

Digital Door Lock AML 657

XL-C 4608

Installation Manual


Notes

SMS-D6-Lock-EL

- 1, Each lock comes standard with two mechanical keys, please put one key in the car or office for emergency use, if all are placed indoors, the company will not be responsible!
- 2, Special note: The "*" key is the exit key and the "#" key is the confirm key.


dormakaba India Private Limited
 Regd. Office & Factory: Plot No. 48/3, 8th Avenue,
 Mahindra World City, Anjur Village, Chengalpattu Dist.
 Tamil Nadu 603002. service.india@dormakaba.com

Schematic diagram of the main parts of the product

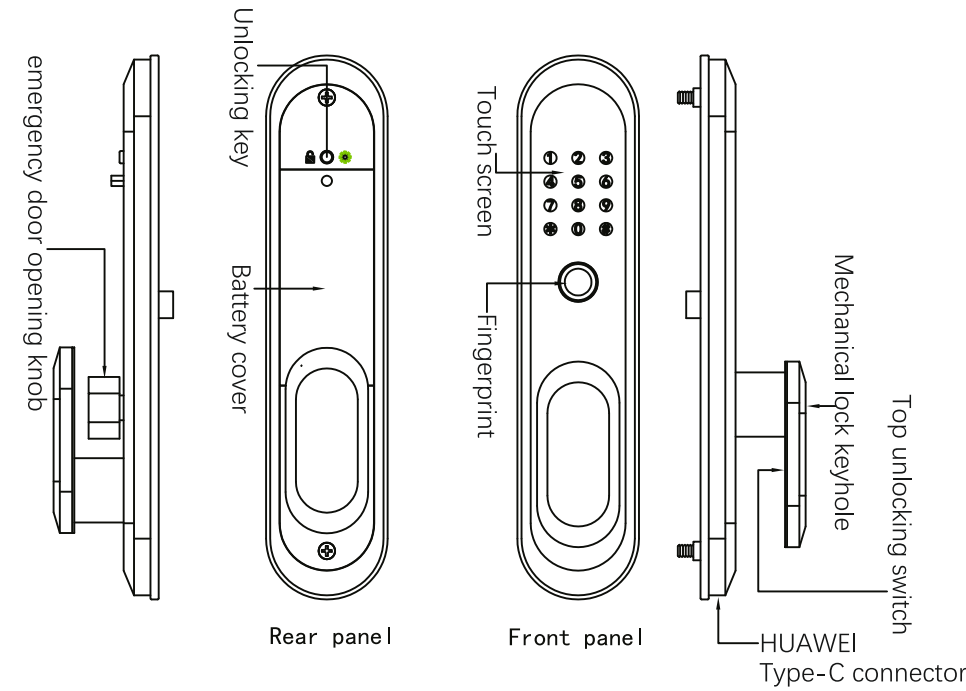 


Restore factory setting

 - 1, Perform operations when the main line of the front and rear panels is connected.
- 2, Press and hold unlocking key and take one battery out and then put it back, there will be a sound of beep. Seconds later, the message "The factory Settings are restored successfully" is displayed, and then let go.

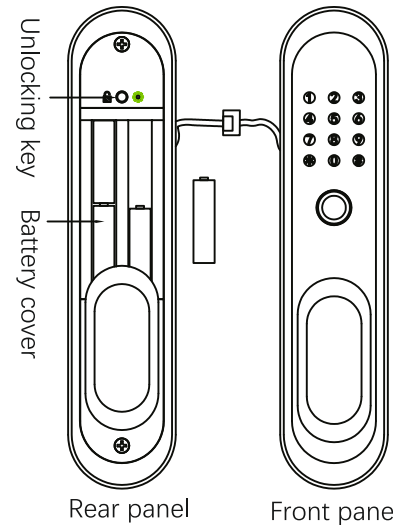


Installation step 1

 - 1, Make installation holes according to the "Opening diagram" in the product packaging box.
- 2, install the lock body first, clipping shall be conducted when 3 components are over length which are measured by door panel.
- 3, Install handle and stud(tighten with pliers), if it is skew, please turned straight and vertical.

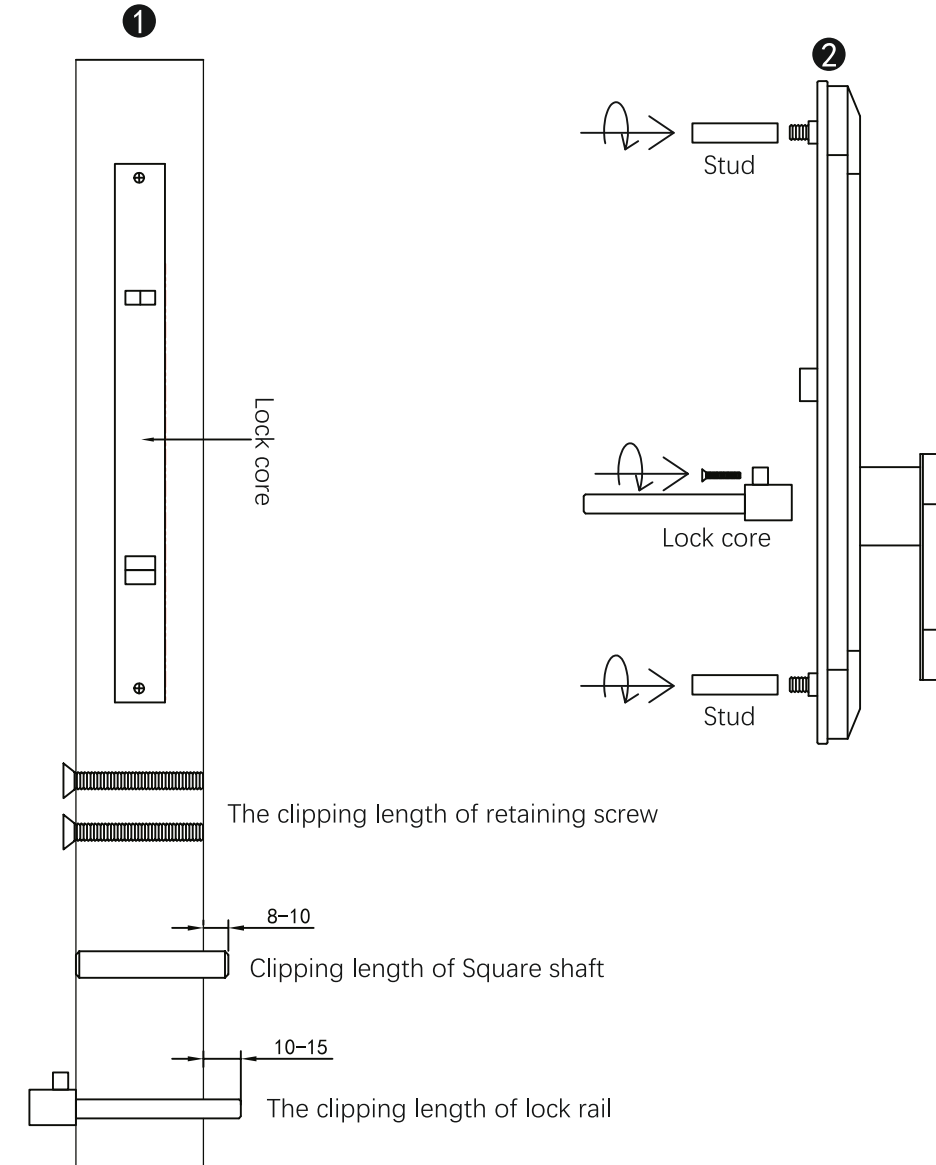


Installation step 2

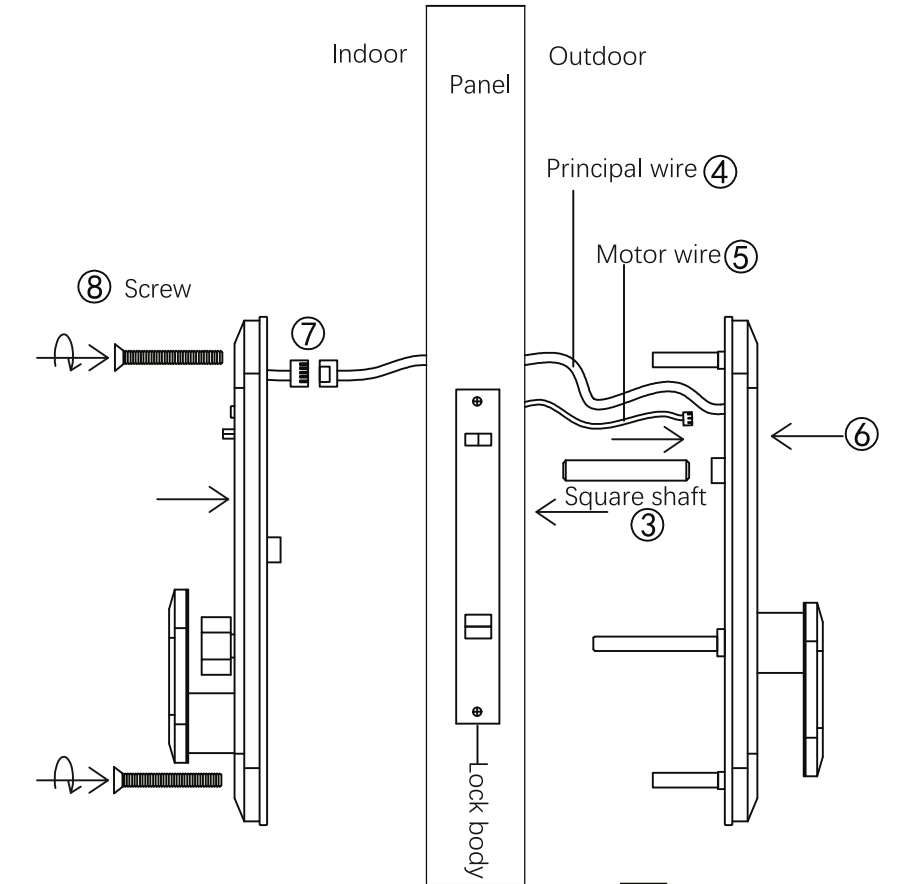 

Special notes

 - 1, The lock body is both left and right.
- 2, According to the opening direction of the door, turn the "lock core tail bar" to the end.
- 3, After the fixing screws are in place, adjust the vertical alignment of the front and rear panels and tighten them.
- 4, After the battery is installed, it will beep, and the product is installed successfully.

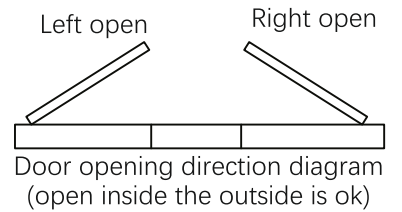

Smart Lock Manual

Opera instruc

1.Add administrator informa

Administrator informa in factory state: 123456
 Administrator informa 5 in total
 Administrator Informa Number: 001-005
 Administrator Informa Permissions: Add User/Delete User/System Se

1. *#Verify administrator informa

2. Add User: Press 1

3. Add administrator: Press 1

4. Add administrator fingerprint: Press 1
 Add administrator card: Press 2
 Add administrator password: Press 3

2.Add regular users

Ordinary user informa a total of 125 groups
 Regular User ID: 006-125
 Normal user informa permission: Unlock

1. *#Verify administrator informa

2. Add User: Press 1

3. Add regular user: Press 2

4. Add regular user fingerprint: Press 1
 Add regular user card: Press 2
 Add regular user password: Press 3

3.delete user

Atenn Delete administrator informa Please use your ID number to delete
 Delete ordinary user informa can be used (group dele (ID number dele

Group deletion

Group dele Delete ordinary user informa by type

1. *#Verify administrator informa

2. Delete user: Press 2

3. Group dele Press 1

4. Clear non administrator fingerprints: Press 1
 Clear non administrator cards: Press 2
 Clear non administrator password: Press 3

ID number deletion

Atenn Enter the corresponding user informa ID number to delete

1. *#Verify administrator informa

2. Delete user: Press 2

3. Number dele Press 2

4. Please enter the number:
 Confirm and press the # key

4. se

For example: 2024/01/01 01:01:01

1. *#Verify administrator informa

2. System se Press 3

3. Time se Press 1

4. Please enter the year: 24
 Please enter the month: 01
 Please enter date: 01
 Please enter hour: 01
 Please enter score: 01
 Please enter seconds: 01
 Press the # key to confirm

5.Language se

Support: Chinese/English

1. *#Verify administrator informa

2. System se Press 3

3. Language se Press 2

4. Chinese: Press 1
 English: Press 2

6.Volume Se

Volume se Set the sound size

1. *#Verify administrator informa

2. System se Press 3

3. Volume se Press 3

4. Increase volume: Press 2
 Reduce volume: Press 8
 Press the # key to confirm

7.Unlock mode

Unlock mode support: single informa unlock/combina informa unlock
 Unlocking mode is only limited to: regular user informa

1. *#Verify administrator informa

2. System se Press 3

3. Unlock mode: Press 4

4. Single open mode: Press 1
 Double open mode: Press 2

8.Restore factory se

Method 1: Enter the se mode to restore factory se


1. *#Verify administrator informa

2. System se Press 3

3. Restore factory se Press 7

4. Press the # key to confirm

 Method 2: Remove a battery, hold down the unlock button, install the battery and wait for a few seconds. The door lock will prompt to press the # key to confirm.

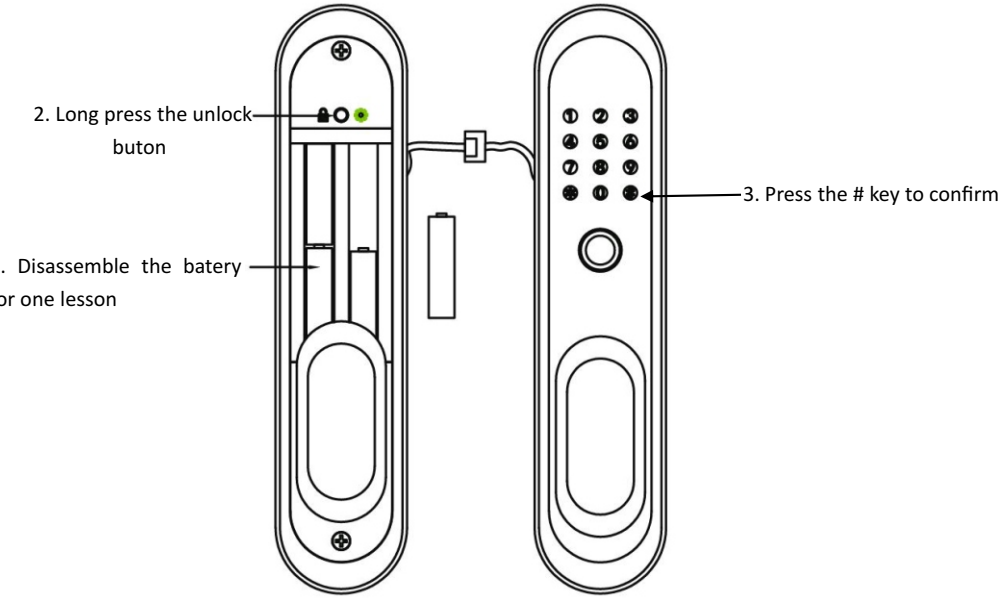

9.Unlock record query

Record query: press 2 to search forward/press 8 to search backward

<p>*#Verify administrator informa</p>	<p>Record query: press 4</p>	<p>Forward search: press 2 Search backwards: press 8</p>
---------------------------------------	------------------------------	--

APP connection operation instructions

1.Download the APP

Please scan the code or search for the name to download the APP

 
 


1. Door lock AIDO WiFi function is only supported: WiFi2.4HzNote: (Generally, 5G router will have two WiFi bands. If your router is in the dual-frequencyintegrated state, you must separate the 2.4G-5G signal, and connect the mobile phone to2.4GWiFi to connect the door lock.)
2. The AIDO WiFi connection did not successfully try to restore the door lock to the factory Settings and try again
3. Attention Before connection to the APP, the door lock needs to have administratorinformation added in order to connect. Do not enable anti lock permission



Application for unlocking mode

1. Remote unlock
2. Temporary password
3. Application can be added (family/ user)

2.Install the app, register and log in

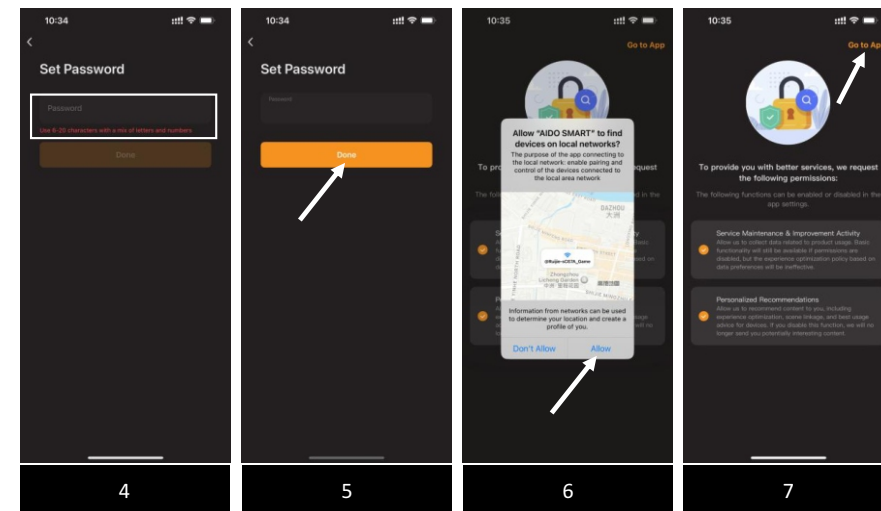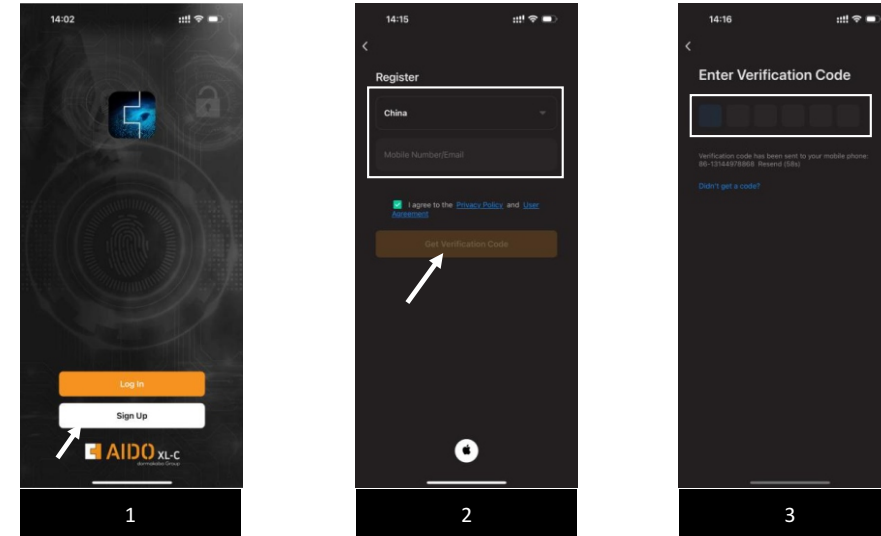

  3.establish a home

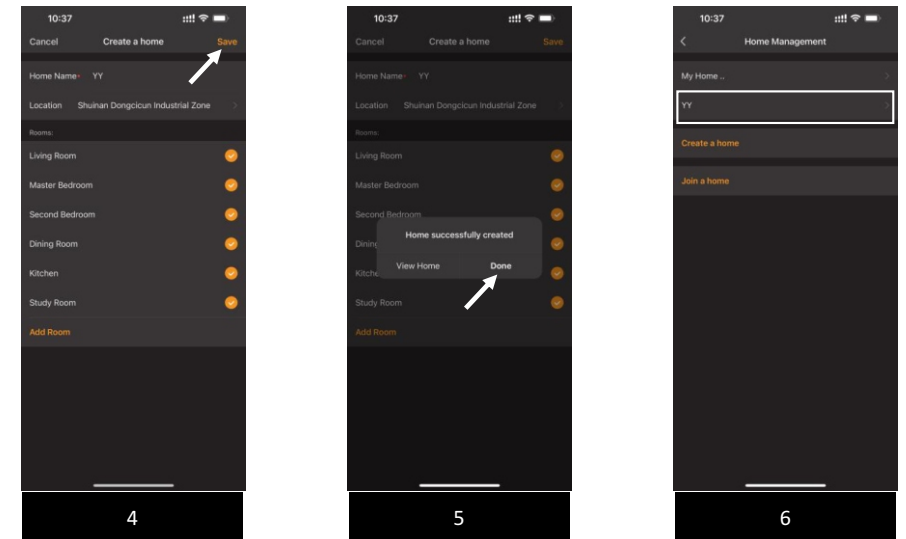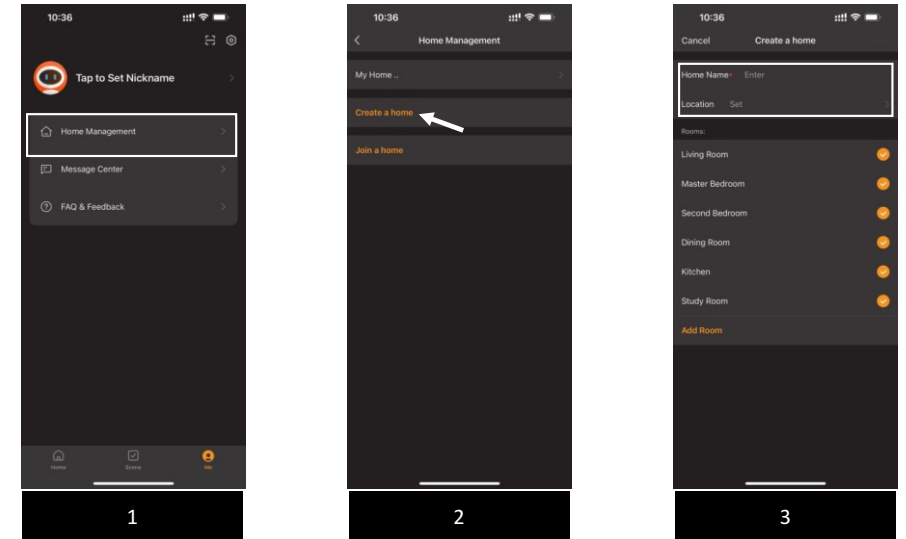

4. Connect door lock AIDO smart



*#Verify administrator informa	System se Press 3	Network configura Press 5	Intelligent networking: Press 1 Press the # key to confirm

5. Remote unlocking



Remote unlocking method: Ring the doorbell to request remote unlocking

6. Temporary Password

Method for generating temporary password: You need to manually wake up the door lock to synchronize the temporary password



7. Delete temporary password

Method to delete temporary password: You need to manually wake up the door lock and synchronize the delete



Normally open function Settings



The longtime open function is

After the "normally open function" is opened, you can open the door normally without putting fingerprints or other unlocking information, which is convenient for you to open the door at home or when friends visit.

Open method: Long press the "door key" to the voice prompt "unlocked" to let go and then press the "door key" after the 5 beeps prompt "usually open has opened" to let go. Close method: Press and hold the Door Open button until the voice prompts "Normally open is closed".

 
Normal unlocking

Outdoor normal door opening:

After the fingerprint is placed, the voice prompts "Unlocked" and pushes the door. It locks automatically after closing the door.

Normal indoor opening:

Long press "door open" voice prompt "Unlocked" Let go and open the door. It locks automatically after closing the door.

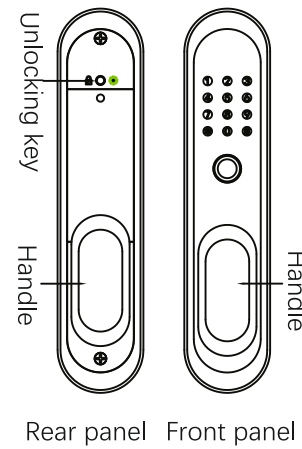

Emergency unlocking

Outdoor emergency opening:

Open with the mechanical key, press the top button switch from behind the handle with your finger, turn the top cover to one side and see the key Key hole, insert the key and turn to the bottom of right direction, push the door to open, pull out the key and turn the cover back to the original place to cover.

Indoor emergency opening:

Turn the "emergency door opening knob" to the left to open the rear door. Twist it back after unlocking.

