

# Digital Door Lock AML 551



XL-C 4610



## **Technical Parameters**

Techical Parameters			
	Items	Parameters	Memo
1	Quiescent current	≦50uA	
2	Dynamic current	≦180mA	
3	Administrators' number	10	
4	Fingerprint number	110 (optional300)	
5	Fingerprint + password + card capacity	300	
6	Fingerprint scanner	semiconductor	
7	Fingerprint contrast time	≦1Second	
8	Fingerprint identification Angle	360°	
9	False Rejection Rate	<b>≤</b> 0.1%	
10	False Recognition Rate	<b>≦</b> 0. 0001%	
11	Reaction time	≦0.5 Second	
12	Power type	6V	
13	Emergency powering	5VDC	
14	Working temperature	−25°C~60°C	
15	Working Relative Humidity	20%~90%RH	
16	Human voice	Yes	
17	KBD	Touch standard 12-bit keyboard	
18	Password Length	6-8bit	
19	Phantom password	16bit	
20	Low voltage alarm	4.8±0.2V	
21	Unlock time	≦1Second	

#### Language settings

Nine language version language switch (default English), enter the shortcut key in the initialization state, press # to confirm:

Shortcut key	Language
555666880	English (factory default)
555666881	Vietnamese (Ting Vit)
555666882	Portuguese
555666883	Arabic
555666884	Russian
555666885	Thai.
555666886	Spani sh
555666887	Indonesian
555666888	French



## **1.Function and Operation**

- 1.1 Description of terms and functional keys
- Administrator information: refers to the administrator's fingerprint, password or ID card.
- 2) Unlock information: refers to the input fingerprint, password or IC card information (including administrators and ordinary users).
- 3) Key "\*": clear key/back key. Enter the password and point by clearing the previous input. Click the clear key three times in succession, empty all input.
- 4) Key "#": confirmation key or menu function key.

#### 2. Initial state

- The factory administrator initial password is 123456, under the initial state any fingerprint, IC card or password can open the lock.
- Any fingerprint, IC card or password which are not input can't open the lock after inputting the administrator information.

#### 3.Add administrator information

Administrator ID number: 001-009

Administrator information capacity: 9 people









Press \* # 123456 # to enter the settings mode when adding administrator information for the first time in factory mode



Press 1: Add administrator

Please enter administrator information Password# fingerprint card

Add administrator information: \*#
Verify administrator information
(password #/ fingerprint/card) Enter
Settings mode

## 4. Delete administrator information

(Method for deleting administrator information: Use ID number to delete)

Note: To delete an administrator, at least two administrator information must be locked. For example, to delete an administrator (001), it is necessary for the administrator (002-009) to enter the settings mode in order to delete the (001) information



Add administrator information: \*#
Verify administrator information
(password #/ fingerprint/card) Enter
Settings mode



Press 1: administrator settings



Press 2: Delete administrator



Please enter your ID number and press the # key to confirm



For example: Enter ID numbers 001-009



# 5. Add users

User ID number: 010-300 User capacity: 291 people



Add administrator information: \*#
Verify administrator information
(password #/ fingerprint/card) Enter
Settings mode



Press 2: User settings



Press 1: Add User







Please enter unlocking information Password# fingerprint card

#### 6. Delete user

Method 1: Use ID number to delete



Add administrator information: \*#

Verify administrator information

(password #/ fingerprint/card) Enter

Settings mode



Press 2: User settings



Press 2: Delete user



Press 1: ID number deletion



Please enter your ID number and press the # key to confirm

For example: Enter ID numbers 010-300

#### Method 2: Delete All

Delete All means deleting all user information



Add administrator information: \*#
Verify administrator information
(password #/ fingerprint/card) Enter
Settings mode



Press 2: User settings



Press 2: Delete user



Press 2: Delete All
Press the # key to confirm

## 7. Voice settings

Voice settings: Refers to turning on or off mute mode



Add administrator information: \*#

Verify administrator information

(password #/ fingerprint/card) Enter

Settings mode



Press 3: System Settings



Press 1: Voice Settings



Press 1: open the voice

Press 2: turn off the voice

### 8. Unlock mode settings

(Unlock mode: Only restrict user information)

There are two unlocking modes:

The first type: Single unlocking (referring to unlocking with just one user information)

Second type: Combination unlocking (referring to the need for two different user information to unlock)



Add administrator information: \*#

Verify administrator information

(password #/ fingerprint/card) Enter

Settings mode



Press 3: System Settings



Press 2: Unlock mode



Press 1: Single Unlock

Press 2: Combination unlocking



# 9. Restore factory settings

#### Restore Factory Settings: Method 1



Add administrator information: \*#
Verify administrator information
(password #/ fingerprint/card) Enter
Settings mode



Press 4: Restore factory settings









Please enter administrator information: Password# fingerprint

#### Restore Factory Settings: Method 2

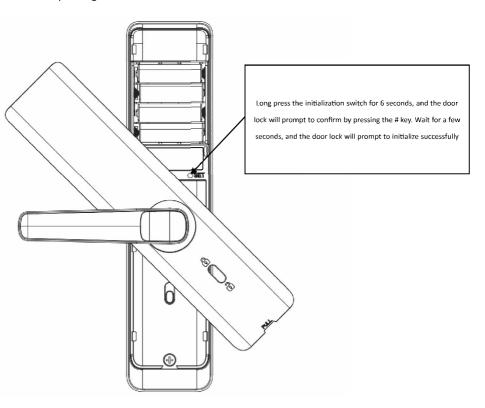

## 10. Normally open mode

Cancel normally open mode: Use unlock information to verify and exit normally open mode

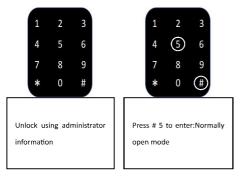

#### 11.Other notes

- Input the wrong password more than 5 times in a row, the keyboard lock for 30 seconds, it does not respond to any operating system in 30 seconds.
- 2) Password peeping prevention function: input password as follows when opening the door with password: XXX password XXX; you can add some extraneous codes before and after the password, and then press # to confirm. The password must be included in the input contents.
- 3) If there is no operation more than 10 seconds, system will automatically exit.
- 4) After the voltage is lower than 4.8v, the lock will automatically alarm every time when it is opened. After the alarm, the lock can be opened for 200 times. After the number of times exceeds, each unlock delay is 5 seconds, new batteries must be replaced before the number of times available.
- 5) When normal open mode is off, press 5 # successively, and the voice says "please enter unlock information". After entering the unlock information, the voice says "normal open mode, please pay attention to locking".
- 6) When normal open mode is on, press 5 # successively, and the voice says "normal open mode closed".
- 7) Back locking function: After pressing back locking key, the voice says "the door is locked". Now, ordinary users cannot open it, and only administrators can do so.



# **AIDO Operation Manual**

# Matters need attention

- 1. Door lock AIDO WiFi function is only supported: WiFi2.4Hz
- Note: (Generally, 5G router will have two WiFi bands. If your router is in the dual-frequency integrated state, you must separate the 2.4G-5G signal, and connect the mobile phone to 2.4GWiFi to connect the door lock.)
- 2. The AIDO WiFi connection did not successfully try to restore the door lock to the factory Settings and try again
- 3. Attention: Before connecting to the APP, the door lock needs to have administrator information added in order to connect. Do not enable anti lock permission

## Download the app

Application support: AIDO Smart



AIDO SMART



Please scan the code or search for the app name to download the app

# Application for unlocking mode

- 1. Remote unlock
- 2. Temporary password
- 3. Application can be added (family / user)

## Connect door lock AIDO smart

1. After installation (application), register an account and log in

























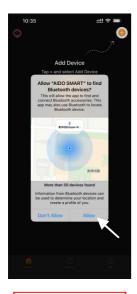




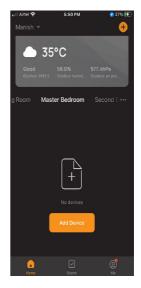



#### 2. Log in to your account and create a family





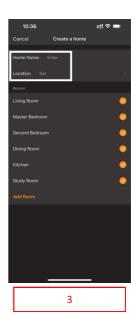

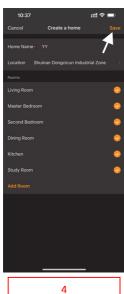

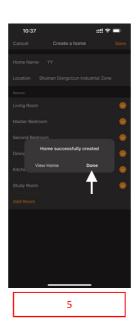





#### Operation door lock: Enter the setting mode to start (start the distribution network)



 






1







4





•

### Remote unlocking

Operation method: Ring the doorbell to request remote unlocking











3

#### Get dynamic password

Dynamic password: valid for 5 minutes

Slide to the left on the door lock marker to enter the dynamic password page



1



2





# Generate: Online temporary password

Note: To generate the online temporary password, you need to manually wake the door lock. Wait 3 seconds and then drop down the app page to update the status

Temporary PW



















# Delete: Temporary online password

Delete: Online temporary password required (manually wake up the door lock), wait for 3 seconds, pull down the app page to refresh the status















